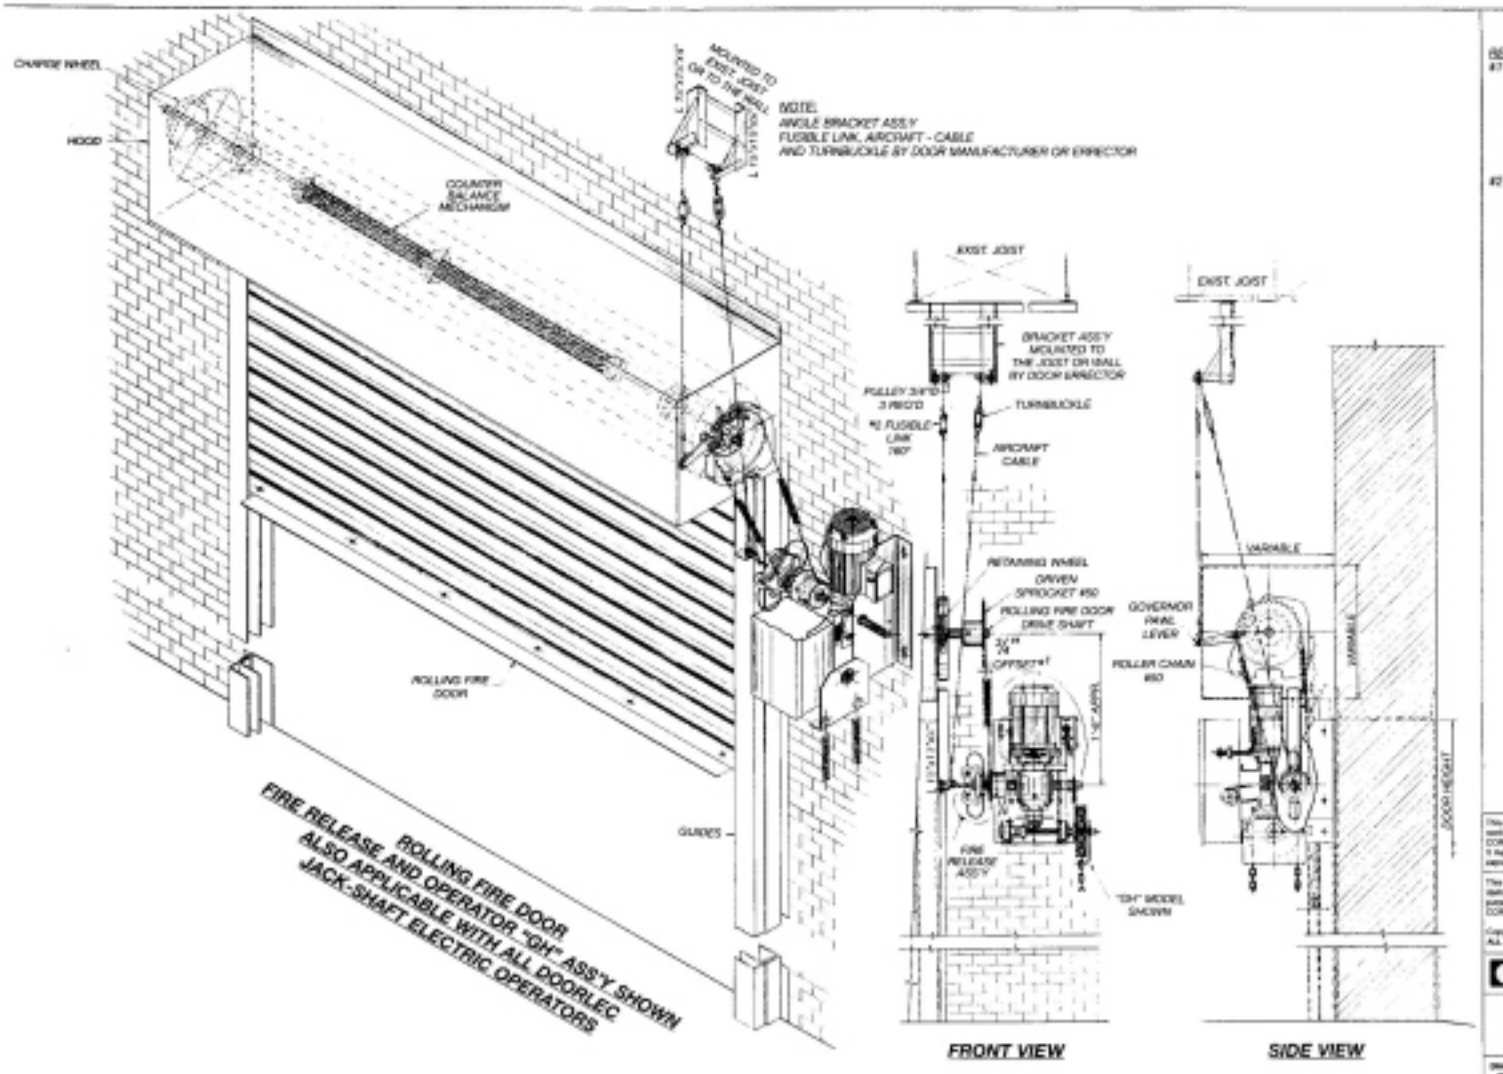


REMARKS :

#1 TO PROVIDE PROPER SEPARATION OF FIRE RELEASE DEVICE, DRIVE CHAIN MUST BE MOUNTED AS SHOWN WITH A 3/4" OFFSET BETWEEN DRIVEN AND DRIVE SPROCKETS.

#2 ACTUAL CONFIGURATION MAY DIFFER. SEE DOOR MANUFACTURER RECOMMENDATIONS FOR USE WITH SPECIFIC DOOR "DO NOT" INSTALL THIS UNIT WITHOUT FUSE LINK.

This drawing and all information contained hereon is confidential and the property of DOORLEC CORPORATION. It may not be reproduced in whole or in part without express written consent.

This document shared subject to be returned upon demand. It may not be used directly or indirectly for purposes detrimental to the interest of DOORLEC CORPORATION.

Copyright 1995
ALL RIGHT RESERVED.

DOORLEC

FIRE RELEASE SOLENOID INSTALLATION FOR ROLLING FIRE DOORS AND FIRE SHUTTER

| DRAWN BY | APPR. BY | DATE | DWG N° |
|---|---|---|---|
| B.S. | P.G.S. | 95-9-28 | 3034 |